

Mini Wireless Optical Mouse

Instruction Manual

HO97985



www.jascopeproducts.com

TABLE OF CONTENTS

1.	PACKAGE CONTENTS -----	3
2.	SYSTEM REQUIREMENTS -----	3
3.	SPECIAL MOUSE FUNCTIONS -----	3
4.	BATTERY INSTALLATION -----	4
5.	HARDWARE INSTALLATION -----	5
6.	SOFTWARE INSTALLATION -----	6
7.	UNINSTALL MOUSE SOFTWARE -----	15
8.	TROUBLE SHOOTING -----	17
9.	FIVE YEAR LIMITED WARRANTY -----	19
10.	FCC STATEMENT -----	20

1. Package Contents

- Mini Wireless Optical Mouse
- Mini USB Receiver
- Mini Software CD
- Mini Instruction Manual
- 2 AAA Batteries
- Travel Bag

2. System Requirements


- Windows® 98 SE or higher
- Available USB Port
- CD-ROM drive

3. Special Mouse Functions

- To turn your mouse off while traveling, press and hold the scroll wheel button. While pressing the scroll wheel button, press the link button on the bottom of the mouse. To turn the mouse on repeat this process.
- The mouse will go to sleep when idle for a long period of time to save batteries. To wake the mouse, press any mouse button.
- When the Low Battery LED (located near the scroll wheel) is illuminated, change the batteries. See Section 4. **You will need to re-link your mouse.** See Section 5.

Page 3

 4. Battery Installation

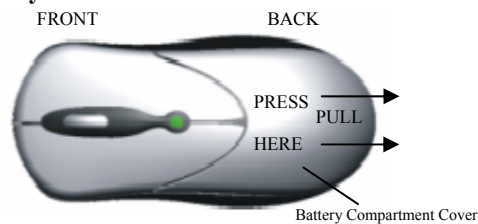

- 1) Grip the front of the mouse (the end with the buttons) with your left hand.
- 2) With your right hand hold the back of the mouse (end opposite the buttons) with your thumb on the bottom, and your index finger and middle finger resting on top.
- 3) Grip the mouse firmly, pressing down slightly on the GE logo on top of the mouse with the index and middle finger of your right hand, then pull back to release the battery cover.
- 4) Set the battery compartment cover aside. Insert 2 AAA batteries, being sure to match the polarity of the batteries with the polarity markings inside the battery compartment.
- 5) Replace the battery compartment cover.
- 6) Re-link your mouse. See Section 5.

Page 4

5. Hardware Installation

Please keep these directions in a safe place. **Each time you replace the batteries you will need to re-link your mouse.**

- 1) Insert the enclosed batteries into the battery compartment of your mouse following the directions in Section 3.
- 2) Plug the Optical Mini Mouse receiver into an available USB port on your computer or USB hub. It is not necessary to reboot your computer.
- 3) If prompted, insert your Windows disk and follow the on screen instructions. (This step is not necessary for all operating systems. Your system will prompt you if it is necessary.)
- 4) Press the link button on your receiver.
- 5) Press the link button on the bottom of your mouse.
- 6) Your mouse should now function normally. Move your mouse to test functionality.

6. Software Installation

The mouse will function normally without the included software. The software is only necessary to program the function of the scroll wheel. It is always a good idea to back up your system before adding any new software to your computer.


- 1) Uninstall any previously installed third-party mouse software.
DO NOT uninstall the standard Microsoft mouse driver.
To do this, please consult the user's manual for your existing software. (In most cases you will use "Add/Remove Programs" in the Control Panel. The Control Panel is located in the Start Menu. In some operating systems, the Control Panel is located under "Settings" in the Start Menu.)
- 2) Close all open applications, then insert the included CD into your CD drive.

- 3) If the CD does not run automatically, open **My Computer**.
Double-click on your CD Drive. Double-click on **Setup**. The
CD should run.
- 4) Follow the on screen instructions to complete the software
installation
 - a) Select “English” and click **Next**.




Page 7

 - b) Click **Next** on the Welcome Screen.

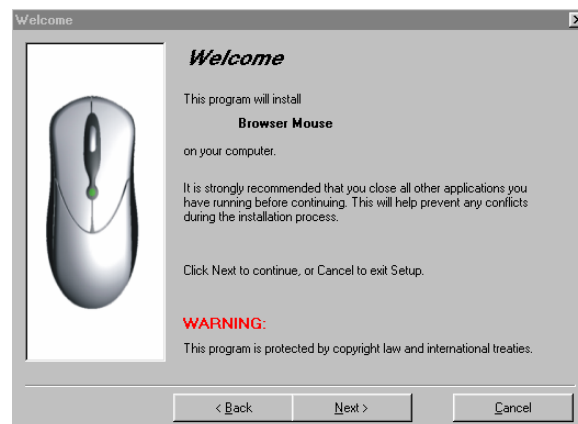


Page 8

 - c) Click **Next** to select the default destination directory.

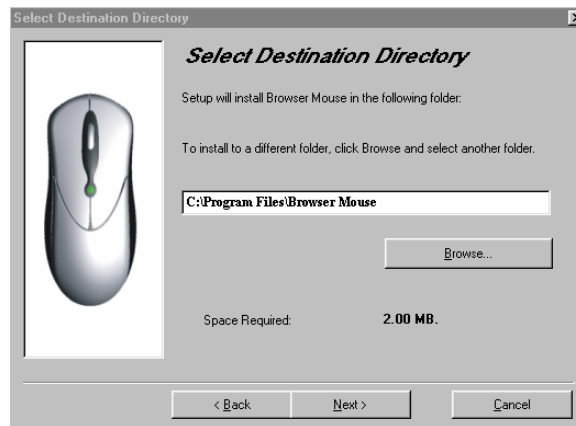


Page 9

 - d) Click **Next** to select the default program folder.

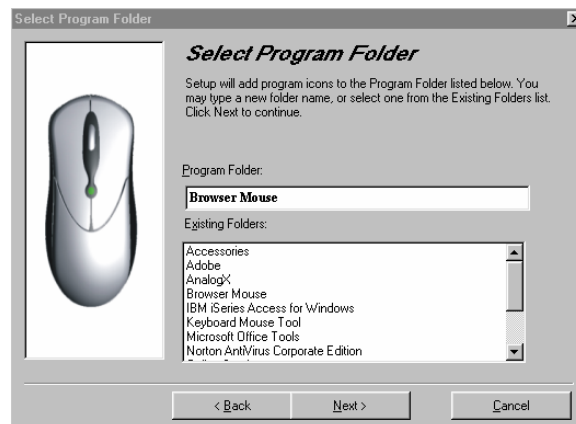

Page 10

 - e) Click **Next** to start copying files.

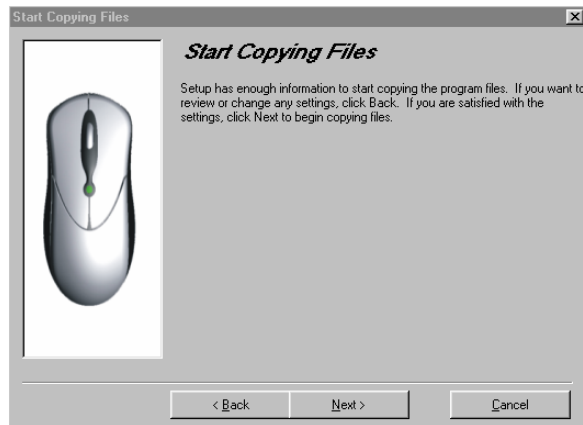

- f) Wait while files are copied to your computer.




Page 11


- g) When prompted, click **Finish** to restart your computer.



Page 12

- 5) To change settings for your mouse, double click on the mouse icon () that appears in the system tray in the lower right corner of the screen. From this menu you can:

 
a) Change the scroll settings

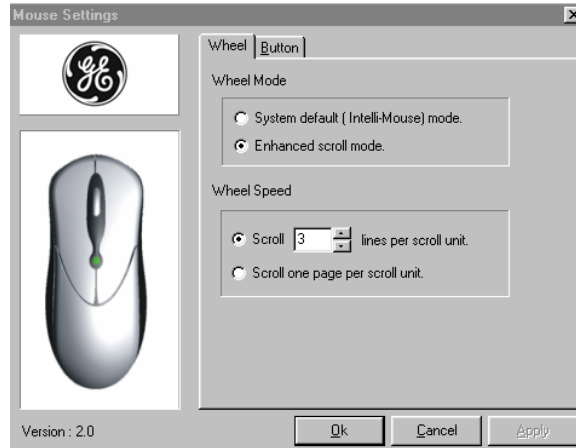

Page 13

b) Program the function of the scroll button.

 - Select a function from the drop down menu.
- Click **Apply** followed by **OK**.

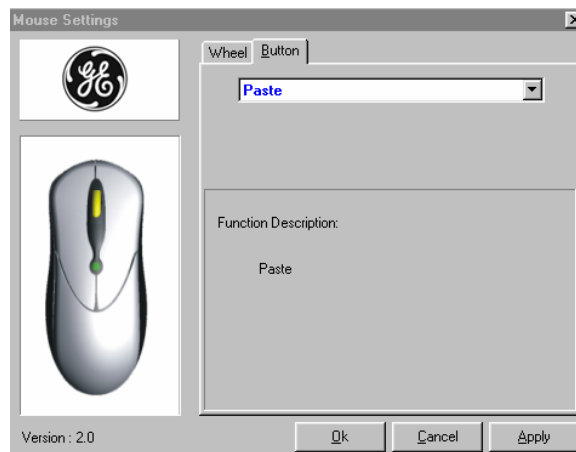

- 6) You can change the standard mouse functions by double clicking on the Mouse icon in the Control Panel.

Page 14

7. Uninstall Mouse Software

You have two choices. Follow either Method 1 or Method 2.

Method 1

- 1) Right-click on the mouse icon in the system tray (lower right corner of the screen) and click **Exit**.
- 2) Close all open applications.
- 3) Open the **Start Menu** by clicking on Start in lower left corner of the screen.
- 4) Click on **Programs** or **All Programs**.
- 5) Click on **Browser Mouse**. If you cannot locate Browser Mouse here, go on to Method 2.
- 6) Click on **Uninstall Browser Mouse**.
- 7) Follow the on-screen instructions.
- 8) Click **Next** to continue.
- 9) Click **Finish** to restart your computer.

Page 15

Method 2

- 1) Right-click on the mouse icon in the system tray (lower right corner of the screen) and click **Exit**.
- 2) Close all open applications.
- 3) Open the **Start Menu** by clicking on Start in lower left corner of the screen.
- 4) Open the **Control Panel** (sometimes located under Settings).
- 5) Open **Add/Remove Programs**
- 6) Click on **Browser Mouse**.
- 7) Click on **Remove**.
- 8) Follow the on-screen instructions.
- 9) Click **Next** to continue.
- 10) Click **Finish** to restart your computer.

Page 16

8. Trouble Shooting

- **The Mini Optical Mouse does not work properly**

- Optical mice do not work well on glass or highly reflective surfaces. If this applies to you, try using your mouse on a different surface.
- If your mouse has been idle for a period of time it may be asleep to conserve battery power. Press the left mouse button to wake it.
- Re-link your mouse. Press the link button on the receiver. Press the link button on the bottom of your mouse.
- Make sure all other mouse software has been removed from your PC. Follow Step 1 of Section 6.
- Right-click on the mouse icon in the system tray and click Exit. Uninstall the mouse software following the directions in Section 7. Reinstall the mouse software following the directions in Section 6.

Page 17

- **Other application software will not install properly**

This may be due to the Mini Optical Mouse Software. Remove the software as described in Section 7. Install the other application. Reinstall the Mini Optical Mouse Software as described in Section 6.

- **Scrolling left & right does not work smoothly**

Your operating system may not support this function.

- **Mouse will not move**

- Press your left mouse button to wake your mouse.
- Re-link your mouse. See section 5.
- Sometimes screen savers interfere with the wake feature. Turn off your screen saver. If the mouse works, try using a different screen saver.
- Change the batteries on your mouse. See section 4.
- Not all laptops support USB mice. Test the mouse on a desktop computer. If this works, contact your laptop dealer.

Page 18

9. Five Year Limited Warranty

Jasco Products Company warrants this product to be free from manufacturing defects for a period of five years from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties express or implied. Some states do not allow limitations on how long an implied warranty lasts or permit the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state. If unit should prove defective within the warranty period, return prepaid with dated proof of purchase to:

Jasco Products Company
311 N.W. 122nd
Oklahoma City, OK 73114

Page 19

10. FCC Statement

Notice: Federal Communications Commission (FCC) requirements, Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Page 20

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes of modifications not expressly approved by the grantee of this device could void the users authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Distributed for THOMSON INC

by Jasco Products Company

311 N.W. 122nd Street, Oklahoma City, OK 73114

www.jascoproducts.com